

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Security

| Manufacturer | Model | Auto Arming | Zone Bypassing | Zone Name detection | Multiple partitions | Min Core | Support thru | Notes |
|------------------|---|-------------|----------------|---------------------|---------------------|----------|--------------|--|
| Ademco Honeywell | 128FBP 250FBP | | | | | 5.1 | Current | 1 access code, no relay support, No Panic Button |
| | 128BP 250BP FA1660C | • | | | | 4.0 | Current | firmware v3 Only, NOTE: Firmware v4 (BPE) is not supported |
| | 128BPT 250BPT | | | | • | 5.9 | Current | no relay support, No Panic Button |
| Bosch Radionics | D7000 D9000 | • | • | • | • | 4.0 | Current | Firmware 6.80-7.07 |
| GE | Concord | • | • | • | • | 4.0 | Current | Superbus must NOT end in -03 |
| | NX4/6/8 | • | • | | • | 5.1 | Current | Cannot use pin codes ending in 0. MUST use NX-584 to interface RS232 |
| | NX8E | • | • | | • | 4.0 | Current | Cannot use pin codes ending in 0. MUST use P0003 to connect RS232. |
| Napco | P9600 | • | •* | | • | 4.0 | Current | Can be armed in 1 mode ONLY. Bypass Status does not reflect if done via Napco Keypad. serial brick not supported |
| | X255 | • | •* | | • | 4.0 | Current | Can be armed in 1 mode ONLY. Bypass Status does not reflect if done via Napco Keypad. serial brick not supported |
| HAI | Omni LT Pro II | • | • | • | • | 5.1 | Current | Panel MUST be grounded properly |
| Elk | M1 Gold M1 EZ8 | • | | • | • | 4.0 | Current | Firmware 4.3.8 main, 3.1.13 Boot, ELKRP 1.6.2. Tstats/Lighting not Supported |
| DSC | Maxsys | • | • | | • | 5.1 | Current | Can NOT arm in Stay mode |
| | Power 5401 | • | | | • | 4.0 | Current | Thermostats not supported |
| | Power IT-100 | • | | | • | 6.4 | Current | Thermostats not supported |
| Texecom | Premier Elite | • | • | • | • | 6.4 | Current | 640 Series Panel NOT Supported |
| Paradox | EVO 48/96/192/848 NE96 | • | | • | • | 6.4 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Door Locks

| Manufacturer | Model | Wireless type | Deadbolt | Lever | Min Core | Supported thru | Notes |
|--------------|--|---------------|----------|-------|----------|----------------|--|
| Kwickset | 99100-0xx, 914 | Zwave | • | • | 5.8 | Current | Requires Leviton: VRCOP +3 Zwave bridge, VRUSB-1US USB programming stick, Vizia RF+ installer tool software |
| Baldwin | 8252.112.AC3 8252.112.AC3X8 285.150.AC3 8285.150.AC3X | Zwave | • | • | 5.8 | Current | |
| Yale | ARYD210, ARYD220, YRD220-ZW | Zwave | • | • | 5.8 | Current | |
| Schlage | BE369/FE599 | Zwave | | | 5.8 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Climate

| Manufacturer | Model | Connection Type | Remote sensor | Decimal Display | Min Core | Supported Thru | Notes |
|----------------|---|-----------------|---------------|-----------------|----------|----------------|---|
| Aprilaire | 8870 | RS485 | • | | 4.0 | Current | |
| | 8800 | RS485 | • | | 5.4 | Current | Be sure to use REV 2 8800's |
| Carrier/Bryant | Infinity Evolution | Wired | • | | 4.0 | Current | Must use serial brick to connect to S.A.M. if over 10 feet from HC. |
| | CZII | Wired | • | | 5.1 | Current | Requires 485 to 232 adaptor <i>and</i> 485 Isolator |
| HAI | Omnistat2 | RS232 | •* | | 5.1 | Current | A remote sensor can only be used to replace the internal sensor |
| | Omnistat | RS232 | | | 4.0 | Current | Use com port 1 or 2 only |
| Honeywell | YTH8320ZW1007/U | Zwave | | • | 5.8 | Current | Requires Zwave network – See Door lock notes |
| KNX | Various | Wired | | • | 5.4 | Current | Use Tapco gateway |
| Lutron | LR-HVAC-1 RA2 LR-HWL-V HVAC RA2 | RF** | • | | 5.4 | Current | Requires a Main Repeater, not stand alone |
| | LR-HVAC-1 QS LR-HWL-V HVAC QS | RF** | • | | 5.4 | Current | Requires a QS Processor, not stand alone |
| RCS | TR/TS40 TR/TS16 TR/TS60 | RS485 RS232 | •* | | 4.0 | Current | A remote sensor can only be used to replace the internal sensor |
| | TZ45R | Zwave | •* | | 5.8 | Current | Requires Zwave network – See Door lock notes A remote sensor can only be used to replace the internal sensor. |
| Tekmar | Net 4 | RS232 | •* | | 4.0 | Current | A remote sensor can only be used to replace the internal sensor. Requires a NULL |
| Trane | TZEMT400BB32 MAA | Zwave | •* | | 5.8 | Current | Requires Zwave network – See Door lock notes A remote sensor can only be used to replace the internal sensor. |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Climate (continued)

| Manufacturer | Model | Connection Type | Remote sensor | Decimal Display | Min Core | Supported Thru | Notes |
|--------------|----------------------------------|-----------------|---------------|-----------------|----------|----------------|--|
| 2GIG | CT30, CT100 | Zwave | | • | 5.8 | Current | Requires Zwave network – See Door lock notes Auto mode not supported |
| Life Sense | LT1002 | RS485 | | • | 6.1 | Current | Auto mode not supported |
| Vantage | InFusion | Wired Bus | | | 6.1 | Current | Circulate mode and History usage is NOT supported to due protocol limitations. |
| Heatmiser | Heatmiser Tstats | RS485 Wi-Fi | | | 6.3 | Current | |
| Cool Master | Various | RS232 | | | 6.4 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Lighting

| Manufacturer | Model | Connection | Wireless Type | Min Core | Supported Thru | Notes |
|----------------|-------------------------------|--------------------|---------------|----------|----------------|--|
| Centralite | Jetstream | Wireless | Zigbee | 4.0 | Current | |
| | Elegance | Hardwired | N/A | 4.1 | Current | |
| KNX | Various | N/A | N/A | 5.4 | Current | Tapco gateway |
| Leviton | ViziaRF | Wireless | Zwave | 4.0 | Current | Uses the RZCOP NOT the VRCOP |
| Lutron | Illuminations | Hardwired Hybrid | Hybrid RF | 4.0 | Current | |
| | Interactive | Hardwired Hybrid | Hybrid RF | 4.0 | Current | |
| | QS | Hardwired Hybrid | Hybrid RF | 5.4 | Current | Must use Ethernet for auto detect |
| | Radio Ra | Wireless | RF | 4.0 | Current | |
| | Radio Ra 2 | Wireless | RF | 5.4 | Current | Must use Ethernet for auto detect |
| ELAN Pulseworx | PCS | Hardwired | UPB | 4.0 | Current | Follow the 7 Rules of Reliability Program using Upstart software |
| Vantage | Q-link | Hardwired | N/A | 4.0 | Current | |
| | InFusion | Hardwired Hybrid | N/A RF | 6.1 | Current | |
| ESI | R2D7 | Hardwired | N/A | 4.0 | Current | |
| Somfy | RTS | Wireless | RF | 4.0 | Current | |
| | URTSII | Wireless | RF | 4.0 | Current | |
| Clipsal | C-Bus | Hardwired | N/A | 6.3 | Current | |
| Rako | Rako Bridge | Hardwired Wireless | N/A RF | 6.3 | Current | |
| iLight | iCan Devices | Hardwired | N/A | 6.5 | Current | Loads must be added manually |
| Luxom | Coming Soon | | | 6.7 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Pool/Spa

| Manufacturer | Model | Scheduling | Colored Lighting | Chlorinator | Min Core | Supported Thru | Notes |
|--------------|---|------------|------------------|-------------|----------|----------------|--|
| Jandy | Aqualink | | | | 4.0 | Current | Jandy Serial Adapter 7620 is REQUIRED Adapter should be located within 20 feet of Controller |
| Pentair | Easy touch Intelli touch | • | • | • | 4.0 | Current | |

Irrigation

| Manufacturer | Model | Rain Sensor Supported | Min Core | Supported Thru | Notes |
|--------------|--|-----------------------|----------|----------------|--|
| Hunter | SRC/SRC + Pro-C/ICC X-core | • | 4.0 | Current | Irrigation Brick: HWEB-101 REQUIRED |
| | ACC | • | 4.0 | Current | |

UPS/ Surge

| Manufacturer | Model | UPS | Surge | controllable outlets | Min Core | Supported Thru | Notes |
|--------------|---|-----|-------|----------------------|----------|----------------|-------|
| APC | HS-500 | • | | 2 | 4.0 | 6.1 | |
| Panamax | MB100 MB1500 | • | • | 4 | 5.8 | Current | |
| | M4315 M4320 | | • | 8 | 5.8 | Current | |
| Furman | F1000/F1500 | • | • | 4 | 5.8 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Receivers

| Manufacturer | Models | Min Core | Supported Thru | Notes |
|--------------|---|----------|----------------|---|
| Denon | 3808/XX10 CI | 4.0 | Current | Check the corresponding integration note for features and limitations on a particular make/model as there are variances among receiver models |
| | 2311/3311/4311 | 5.2 | Current | |
| | 1912/2112/2312/3312 | 5.4 | Current | |
| | 1613/1713/1913/2113/2313/3313 | 5.8 | Current | |
| | 4520CI/Xx000 | 6.5 | Current | |
| Yamaha | A800/1000/2000/3000 | 5.2 | Current | |
| | A710/810/1010/2010/3010 | 5.4 | Current | |
| | Ax020/Ax030 | 6.5 | Current | |
| | RX-V1600/V2600, RX-Z9 | 4.0 | Current | |
| | RX-V3900/V2065 | 4.0 | Current | |
| Integra | DTR-4.9/5.9/6.9/7.9/8.9/9.9 | 4.0 | Current | |
| | DTR-4.6/5.4/5.6/6.6/7.4/7.6 | 5.0 | Current | |
| | 20.3/30.3/40.3/50.3/70.3/80.3 | 5.4 | Current | |
| | 40.1/50.1/70.1/80.1 | 5.0 | Current | |
| | 70.4/50.4/40.4 | 6.3 | Current | |
| | 60.5/50.5/40.5 | 6.5 | Current | |
| Onkyo | TX-NR906/TX-SR876/PR-SC886/TX-SR806/TXSR706 | 4.0 | Current | |
| | TX-NR1007/TX-NR3007/TX-NR5007 | 5.0 | Current | |
| | TX-NR515/616/717/818/1010/3010/5010 | 6.3 | Current | |
| | TX-NR525/626/727/828/929 | 6.5 | Current | |
| Marantz | SR5500/5600/7500/8001/8500/9600/SR5004/SR6004/SR7002/8002 | 5.0 | Current | |
| | SR6006/SR5006 | 5.4 | Current | |
| | SR6005/AV7005/SR7005 | 5.2 | Current | |
| | ST7001 | 4.0 | Current | |
| | SR5007/6007/7007, AV7701/8801, NR1602/1603 | 6.3 | Current | |
| | SR5008/6008/7008 | 6.5 | Current | |
| Pioneer | VSX-60, SC-61/SC-63/SC-65/SC-67/SC-68 | 5.8 | Current | |
| | SC-xx/VSX-xx-K | 6.5 | Current | |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Multi Zone Distribution

| Manufacturer | Models | Max Sources | Max Zones per chassis | Max Chassis | Min Core | Supported Thru | Notes |
|--------------|--|-------------|-----------------------|-------------|----------|----------------|--|
| ADA | Suite 16 | 16 | 16 | 6(96) | 4.0 | Current | REQUIRES ISO-CAT II or ISO-232 |
| | Suite 32 | 32 | 32 | (96) | 6.5 | Current | |
| | 8200 | 8 | 8 | 2(16) | 4.0 | Current | |
| B&K | CT310, CT600, CT610 | 9 | 6 | 1 | 4.0 | 6.1 | |
| Matrix | Series 4, 6, 8 | 8 | 4,6,8 | 2 24/32 | 4.0 | 6.1 | |
| Nexus | C-6, C-6E | 5 | 6,12 | 1 | 4.0 | 6.1 | |
| Nuvo | Concerto | 6 | 8 | 1 | 4.0 | Current* | 6.x will have support for the controller ONLY , no keypad devices |
| | Grand Concerto | 6 | 8 | 2 (16) | 4.0 | Current* | |
| | Essentia | 6 | 6 | 1 | 4.0 | Current* | |
| | Essentia E6G | 6 | 6 | 2 (12) | 4.0 | Current* | |
| Niles | GXR-2 | 6 | 6 | 2 (12) | 5.4 | Current | |
| Russound | CAV6.6 CAM6.6 | 6 | 6 | 1 | 4.0 | 6.1* | 6.x Zone controller ONLY , no keypad or RNET devices |
| | Sphere | 12 | 8 | 1 | 5.1 | 6.1 | |
| Speakercraft | MZC-64/66/88 | 6 | 4,6,8 | 4 24-32 | 4.0 | Current | |
| Vaux Lattis | LE-400, LE-800 | 8 | 8 | 1 | 4.0 | 6.1 | |
| Video Storm | CMX44, CMX84, CMX86, CMX88 | 4,8 | 4,8 | 1 | 4.0 | 6.1 | |
| Elan | M86 | 6 | 8 | 4(24) | 5.1 | Current | Via-net control only |
| | S86A S86P | 6 | 8 | 4(24) | 4.0 | Current | Requires S12XK to link chassis |
| | S128P | 12 | 32 | 4(32) | 4.0 | Current | Requires S12XK to link chassis |
| | S1616A | 16* | 16* | 16(64) | 5.4 | Current | *Sources and outputs can be configured as mono or stereo Via-net control only |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Video Switchers

| Manufacturer | Models | Max Sources | Max Zones | Min Core | Supported Thru | Notes |
|----------------|--|-------------|-------------------|----------|----------------|--|
| Atlona | AT-PRO Series , AT-H2H Series | 16 | 16 | 5.8 | Current | HD44M Min Core 6.1 HD66M Min Core 6.4 |
| Snap Av Binary | B-100 4x4,8x8 , B-300 4x4,8x8 | 8 | 8 | 5.8 | Current | |
| Elan | V883 , V885 | 8 | 32 (4 Chassis) | 5.1 | Current | Component |
| | V8 | 8 | 32 (4 Chassis) | 5.1 | Current | Composite |
| Xantech | HD44C , HD44CC5 | 4 | 4 | 5.8 | Current | Component |
| | HD88C , HD88CC5 | 8 | 8 | 5.8 | Current | Component |
| Video Storm | CRM62 , CRM84 | 8 | 4/8 | 4.0 | 6.1 | Component |
| Gefen | EXT-HDFST-848CPN , GTB-HDFST-848 , GEFHDFST-848-4ELR , GEF-HDFST-848-8ELR , GTB-HDFST-444 , GEF-HDFST-444 | 4/8 | 4/8 | 6.3 | Current | Tested Firmware 3.1 |
| WyreStorm | MX-0808-PP , MX-0606-PP , MX-0404-PP , MX-0804-PP , MX-1616-310 , MX-0816-310 , MX-0808-310 | 16 | 16 | 6.4 | Current | |
| Just Add Power | SG300-10/10P/10MP/20/28/28P/52 SG500-28/28P/52/52P SG500X-24/24P/48/48P | Many | Many | 6.4 | Current | Cisco SG300 or SG500 Switches ONLY |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Sources

| Manufacturer | Model | Min Core | Supported Thru | Notes |
|-----------------|---|----------|----------------|---|
| Logitech | Logitech Media Server | 6.0 | Current | LMS must run on a local PC 24/7 |
| | Squeezebox touch OLD Driver classic | 4.0 | Current | Pandora/Rhapsody Only |
| | | 4.0 | Current | |
| Fusion Research | OMS 0,1,2,3 | 6.0 | Current | |
| ADA | Tune Suite | 4.0 | Current | |
| Integra | TUN 3.7 | 4.0 | Current | |
| Nexus | T-2 | 4.0 | 6.1 | |
| Nuvo | T2 | 4.0 | 6.1 | |
| | T2SIR | 4.0 | 6.1 | |
| Russound | ST2 AM/FM/XM/Sirius | 4.0 | 6.1 | |
| Sonance iPort | FS-4, FS-5, FS-22, IW-4, IW-5, IW-22, FS-23 | 5.1* | Current | FS-23 Min Core 5.8 |
| Sony | BDP-CX7000ES | 5.1 | Current | |
| Sirius | SCH1P1, SCH2P | 4.0 | Current | |
| Elan | DTNR | 4.0 | Current | |
| | DT11, DT22 | 5.0 | Current | |
| | HC internal player | 5.2 | Current | MP3, WAV, M4A ONLY MAX 65,000 tracks |
| Parasound | Ztuner v.2 | 4.0 | 6.1 | |
| Kaleidescape | M300, M500, Cinema One | 6.4 | Current | One way – OSD control ONLY |
| Snap AV | WPS-300-DVR 9/16 CH | 6.4 | Current | One way – OSD control ONLY |
| | WPS-300-NVR | 6.4 | Current | One way – OSD control ONLY |
| ICRealtime | DVR-FLEX4E/8E/16E | 6.5 | Current | One way – OSD control ONLY |
| Autonomics | MMS2, MMS5A | 6.5 | Current | Firmware 5.0.14545.0 |
| | MMS2, MMS5A | 6.5 | Current | One-way – OSD control ONLY |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

Video Cameras/Encoders

| Manufacturer | Model | Min Core | Supported Thru | Notes |
|--------------|---|----------|----------------|---|
| Panasonic | Standard Models (5.2 and earlier) | 4.0 | Current | See Integration Notes for specific camera models |
| | Standard Models | 6.1 | Current | |
| | iPro Models | 6.1 | Current | |
| Aviosys | 9100B (HWAVO100) | 4.0 | Current | |
| Axis | P5512 | 6.1 | Current | |
| | P3301 | 6.1 | Current | |
| | 214PTZ | 4.0 | Current | |
| | 216FD | 4.0 | Current | |
| | 7014/7001 | 6.1 | Current | |
| | 240/241Q | 4.0 | Current | |
| Vivotek | 7xxx/8xxx | 5.8 | Current | See Integration Notes for specific models |
| | VS8x01 | 5.8 | Current | |
| | VS2403 | 5.1 | Current | |
| DVR | See Integration Note | 5.0 | Current | 50 GB MAX Storage |
| Snap AV | WirePath | 6.4 | Current | See Integration Notes for specific camera models |
| | WPS-300-DVR 9/16 CH | 6.4 | Current | Live feeds ONLY |
| ICRealtime | DVR-FLEX4E/8E/16E | 6.5 | Current | Firmware 2.610.KL05.0 MUST enable second stream to MJPEG |
| ONVIF | ONVIF 2.0 Profile S IP Cameras | 6.5 | Current | MUST be Profile S compatible IP Cameras |

This is for overview purposes only.
 For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

General Input/output Devices

| Manufacturer | Model | Min Core | Supported Thru | Notes |
|----------------|--------------------------------------|----------|----------------|---|
| HC4,6,8,12 | Extender Mode | 6.0 | Current | Via-net and audio does not extend |
| Moxa Nport | 5410, 5610 | 4.0 | Current | Uses their own db9 adaptor |
| KNX | Various Input/output | 5.4 | Current | |
| Global Cache | GC-100-6/12/18 | 4.0 | Current | |
| | iTach, iTach Flex | 6.4 | Current | Sense Inputs NOT Supported |
| Just Add Power | 2G, 2G+ | 6.4 | Current | Utilizing Cisco SG Switches ONLY |
| Xantech | XLIP | 6.7 | Current | |

g! Interface Notes

| Model | Min Core | Supported Thru | Notes |
|--|----------|----------------|------------------------|
| HR2 Integration Note | 5.2 | Current | Use AES Wi-Fi security |
| TS2 Integration note | 5.1 | Current | Uses Via-Net wiring |
| iOS Integration Note gMobile 5 | 4.0 | 5.9 | |
| iOS Integration Note gMobile 6 | 6.0 | Current | |
| Android Integration Note | 6.0 | Current | |
| gMod Integration Note | 5.1 | Current | GPASL Required |

Tech Notes

- [Important note when using ISP provided Routers – Verizon Fios, Uverse exc.](#)
- [Changing the HC controller’s name](#)
- [How to add Music or Pictures to the internal Drive of a HC8/12](#)
- [Email messaging, Alerts, and Notifications](#)
- [Connections Reference Guide](#)
- [Using Generic Zone Controllers](#)
- [Configurator Training Manual](#)
- [Advanced Configurator and Reference Manual](#)
- [Unsupported Driver Guide](#)
- [User Settings Guide](#)
- [User Door Lock Guide](#)

This is for overview purposes only.
For details on what is supported and connectivity you must consult each specific integration note.

Refer to the integration notes for the Complete Integration Guide

Current as of Core Module 6.7 • [Associated Release Notes](#) • [Core Module Download](#)

GPASL Licensing Summary

| Subsystem | Virtual | Base (included) | Pro (GPASL REQUIRED) |
|------------|---------|--|--|
| Security | • | 1 Partition, 8 Zones 1 Door Lock | 8 Partitions, 256 zones 32 Door Locks |
| Climate | • | 2 Thermostats | 32 Thermostats |
| Lighting | • | 16 3 rd Party Loads or Scenes 32 g! Lighting Keypads 32 g! Customizable Scenes | 256 Loads or Scenes 64 g! Lighting Keypads 32 g! Customizable Scenes |
| Media | • | 64 ELAN A/V Zones 1 3 rd Party Supported AVR 8 Sunfire AVR'S 4 Generic Single Zone Controllers | 64 A/V Zones (Any Brand) 8 3 rd Party Supported AVR 8 Sunfire AVR'S 32 Generic Single Zone Controllers |
| Video | | 2 video streams | 16 video streams |
| Irrigation | • | N/A | 16 groups, 256 Zones |
| Pool/Spa | • | N/A | 1 Pool Controller |
| DVR | | N/A | 16 cams, 50 gig max storage |
| Messaging | | 1 Voicemail Box Internal Voicemail (Not Telephone) Email Notifications | 8 Voicemail Boxes Telephone Voicemail – gMod Required Telephone Home Control – gMod Required Text to Speech |

GVSL Licensing Summary

| Core Module | Included | Additional | Unlimited (32) 3 rd Party viewers |
|---------------|----------|--------------------|--|
| Up to 5.9 | 1 | Added individually | N/A |
| 6.0 or Higher | 1 | Up to 3 additional | 4 total licenses |

NOTE:

Please refer to the Integration Note for the specific sub-system to understand any limitations associated with the particular device.